Update Your FBD 56X Merchandiser Graphics in 3 Steps

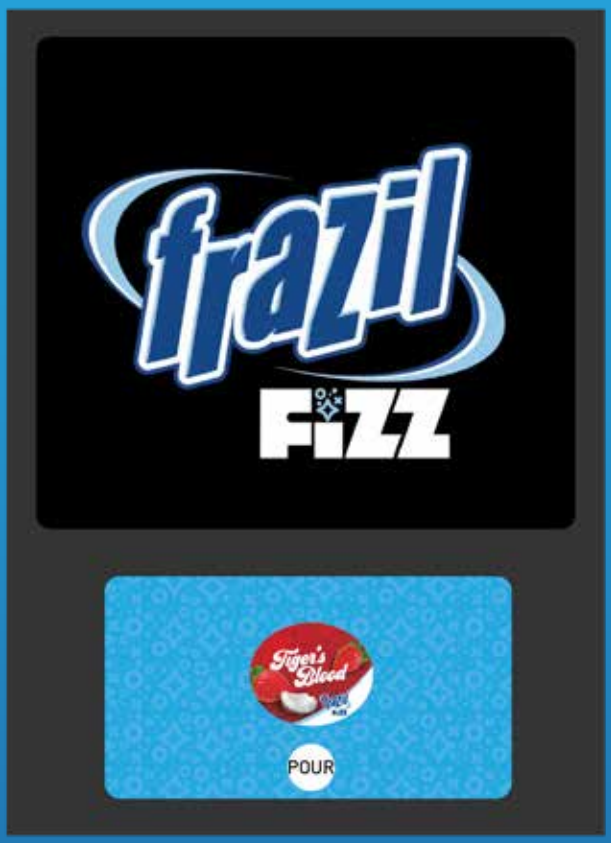

1 Locate SD Card

- Find your SD card on the back side of the video door.
- Plug it into your computer.

2 Download Files

- You will receive a link to download the Frazil Fizz graphics.
- Place Frazil Fizz files in specific folders as outlined in this guide.

3 Load onto Machine

- Plug your SD card back into your machine.
- Follow the instructions in this guide to setup Frazil Fizz graphics on your machine.

Full Instructions

Video Instructions

6.4 Unlocking a 561 Merchandiser

To unlock the 561 merchandiser screen tap and hold a flavor button (**Figure 6.5**) for ten seconds. An "**Enter Password**" window will appear (**Figure 6.6**). Enter the code "561" to enter the Service Mode.



Figure 6.5

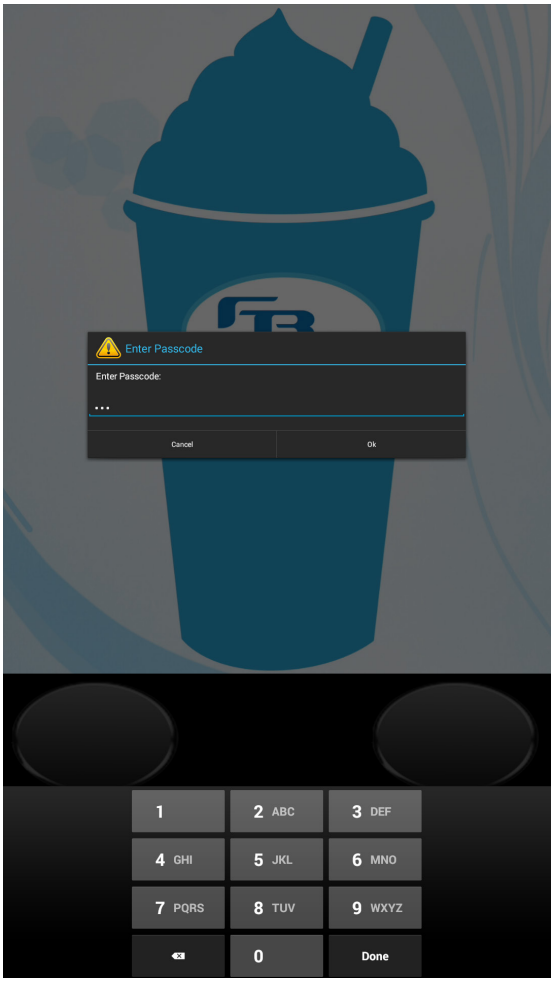

Figure 6.6

6.5 Menu Layout for 561 Merchandiser

Figure 6.7 illustrates the menu displayed after a successful unlock as well as the menu options.



Figure 6.7

Item	Description
1¥	Change Video: Opens video selection menu.
2	Flipped/Not Flipped: Rotates screen orientation.
3¥	Flavor Button: Displays syrup or add-in flavors.
4¥	Flavor Background: Background behind the flavor bubbles.
5	Exit Service Mode: Closes service mode and saves any changes.

¥ Content can be changed.

6.6 Changing Video on 561 Merchandiser

Tap the "Change Video" button to open the video menu (**Figure 6.8**). Tap the desired video to select it, then press the blue arrow to return to the previous screen.

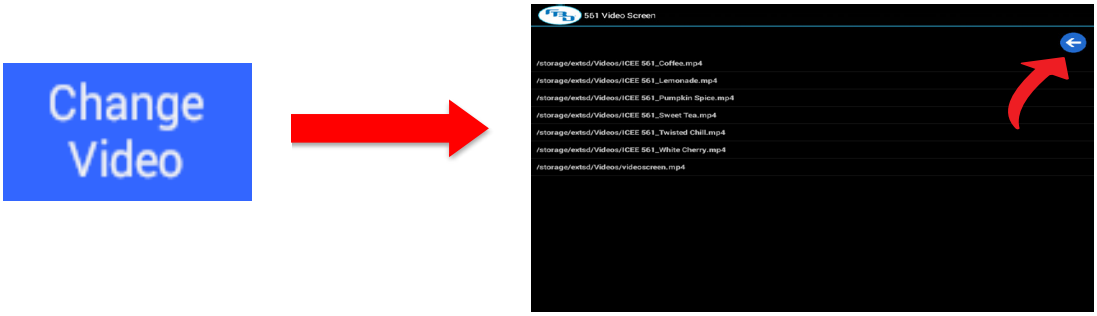

Figure 6.8

6.7 Changing Flavor Images on 561 Merchandiser

To change the image on a flavor button, tap a flavor image to open the images menu. Select the desired image.
To change the background behind the flavor button, tap any part of the screen where the background is visible to open the background menu. Select the desired image (**Figure 6.9**). To exit the image or background menus, press the blue arrow.

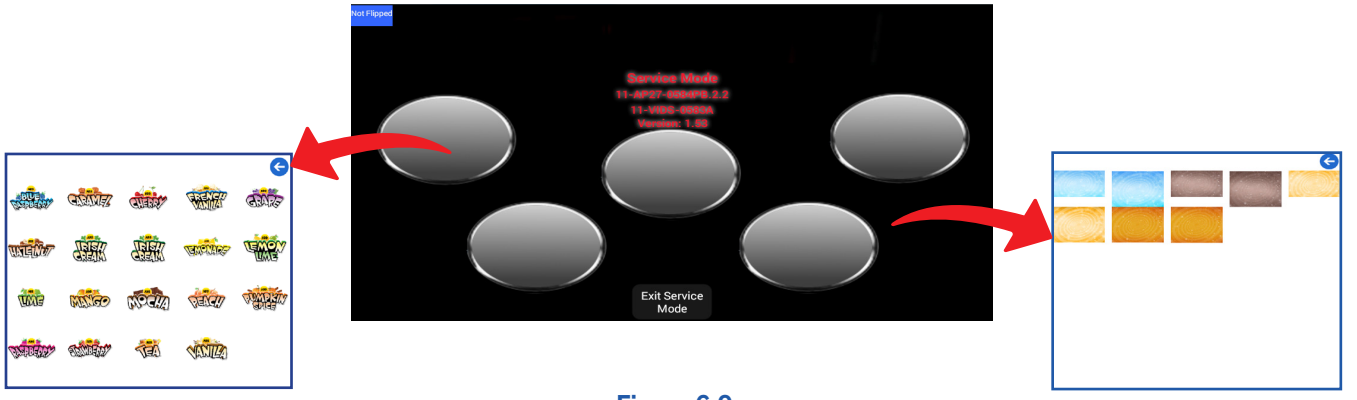

Figure 6.9

6.8 Updating Content on an SD Card

All merchandisers come preloaded with video, flavor, and background content. However, content can be updated, added, or removed as needed. The process below describes the procedure for doing this. However, before adding content to an existing or new large-sized SD card, ensure all folders are named as shown in **Figure 6.10**. If any folder names are different than illustrated in the figure, content will not load or be updated on the screen properly. Also, all images should be formatted as PNG files and all video files as MP4 files unless otherwise noted.

1. Locate the 4 main folders on the SD card. These 4 folders should be named **Backgrounds**, **Buttons**, **Flavors**, and **Videos**. Ensure each folder name begins with an uppercase letter.
2. The **Backgrounds** folder holds the background images for the lower selection flavor portion of the video door. The background images should be formatted to the standard resolution of 1080 x 640 px.
3. The **Buttons** folder holds the button images for the base flavor image that is the center/middle button on the screen and that corresponds to the base flavor connected to the dispenser. These button images should be formatted to the standard resolution of 600 x 500 px.
4. The **Flavors** folder holds the flavor shot images for the four different flavor shots that can be dispensed. These flavor images should also be formatted to 516 x 600 px.
5. The **Videos** folder holds the video files to display on the upper portion of the video door. These videos should be formatted to 1080 x 1280 px, in portrait orientation.

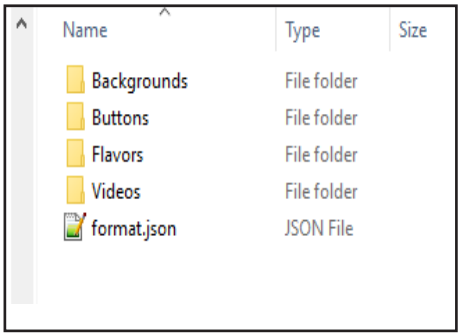

Figure 6.10

6.9 Saving Changes and Exiting Service Mode

As changes are completed throughout the screens in the Service Mode, using the blue arrow found in some of the screens will allow you to return to the previous screens and save the information that was updated. Once all required changes are completed, you can exit the Service Mode by pressing the "Exit Service Mode" button at the bottom of the screen, as shown in **Figure 6.7** found in Section 6.5 of this manual.